



Mounting Instructions Window Shadings





The Blind Factory * 5277 S. Florida Ave. * Lakeland, FL 33813 * (863) 646-8891 * (800) 662-3955 * Fax (863) 701-0889



Congratulations. You have purchased a FineCraft Window Shading, the worlds finest name in custom blinds, shades & shutters. Be sure to ask for genuine FineCraft products whenever needed. Please carefully read the below instructions and fill out and mail the enclosed registration / warranty card. After installation, you will begin enjoying years of service from your FineCraft products. If you have any further questions, please contact your authorized FineCraft dealer.

You will need: A steel tape measure, power drill or screwdriver, #2 square Robertson driver bit, pencil, drill bit.


Step 1) Carefully unpack the FineCraft Window Shading from the protective packaging being cautious not to cut any of the shade cords or damage the shade.

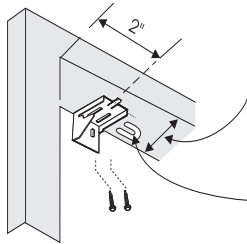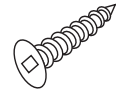


Step 2) For inside mount configurations: Mark a line no less than 2" from both window jambs as shown. Using only the supplied screws, install a screw through the shallow mount holes and into the window header through the marked line. For shades over 70" wide, install an additional bracket in the center of the window in line with the left and right brackets. Side mount shades require the attachment of the standard bracket to an "L" bracket as shown to the right and allow a total of two brackets only. All inside mount shades have a 3/16" width deduction taken off the headrail at the factory to allow proper shade operation.

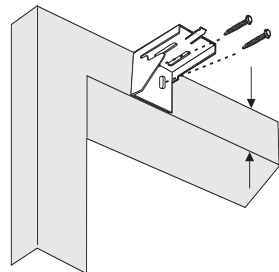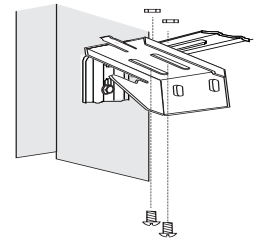

Step 2) For outside mount configurations: Mark a line no less than 3" from both window jambs as shown. Using only the supplied screws, install screws through the back bracket holes and into the window header or trim as shown. For shades over 70" wide, install an additional bracket in the center of the window in perfect alignment with the left and right brackets. Outside mount shade headrails are 3/8" wider than the ordered width to allow improved fabric overlap.

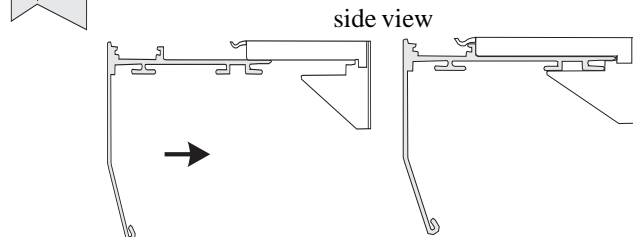


Step 3) With the headrail level, insert the leading edge of the headrail into the bracket tip as shown. Center the shade in / on the opening. Apply pressure on the headrail to seat the headrail into the bracket. The headrail **MUST** be level to allow the shade to roll up evenly. Shim the brackets if needed.

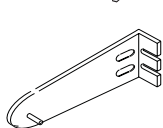


For blinds with optionally ordered hold-down brackets, install the bracket to the wall / door surface in alignment with the outside ends of the bottom rail. The shade must be in the fully lowered and fully open position when mounting the brackets. Insert the hold-down pin in the ends of the bottom rail.

hold-down bracket

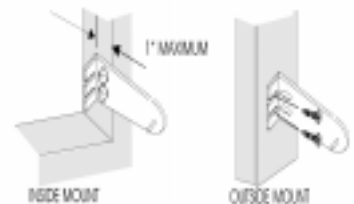

cord hold down

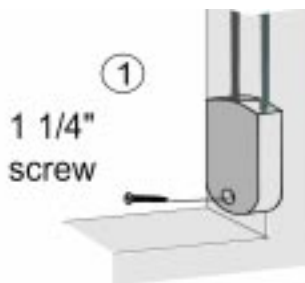

For safety, be sure to keep any cords out of the reach of children and pets using the cord hold down brackets as shown. To operate your shades, pull on one side of the cord loop to open, close, and raise the shade. Your shade will also roll up in a reverse direction. Since the fabric does not roll up as neatly in the reverse direction, it is important not to reverse roll your shades more than 24" from the bottom. FineCraft Blinds should be kept clean and dusted to maintain the quality factory finish. If you have any questions, please contact your authorized FineCraft dealer.

